

Co2 Scrubber

Connections

3/4" male NPT

Absorption material

Color changing soda lime

Amount of material

3 lbs (1.3 Kg)

Co2 absorption capacity


~240-360 liters of Co2

Full weight


7.7 lbs (3.5kg)

Empty weight

4.2 lbs (1.9kg)

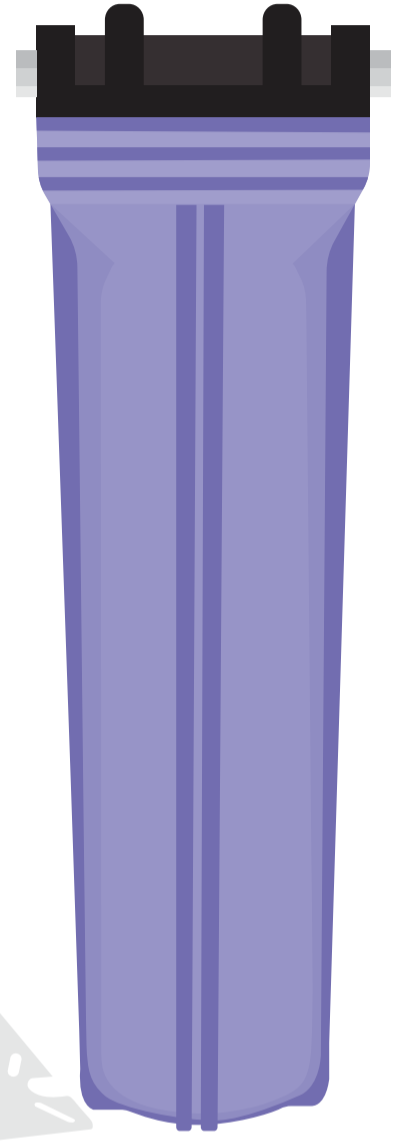


5.25"

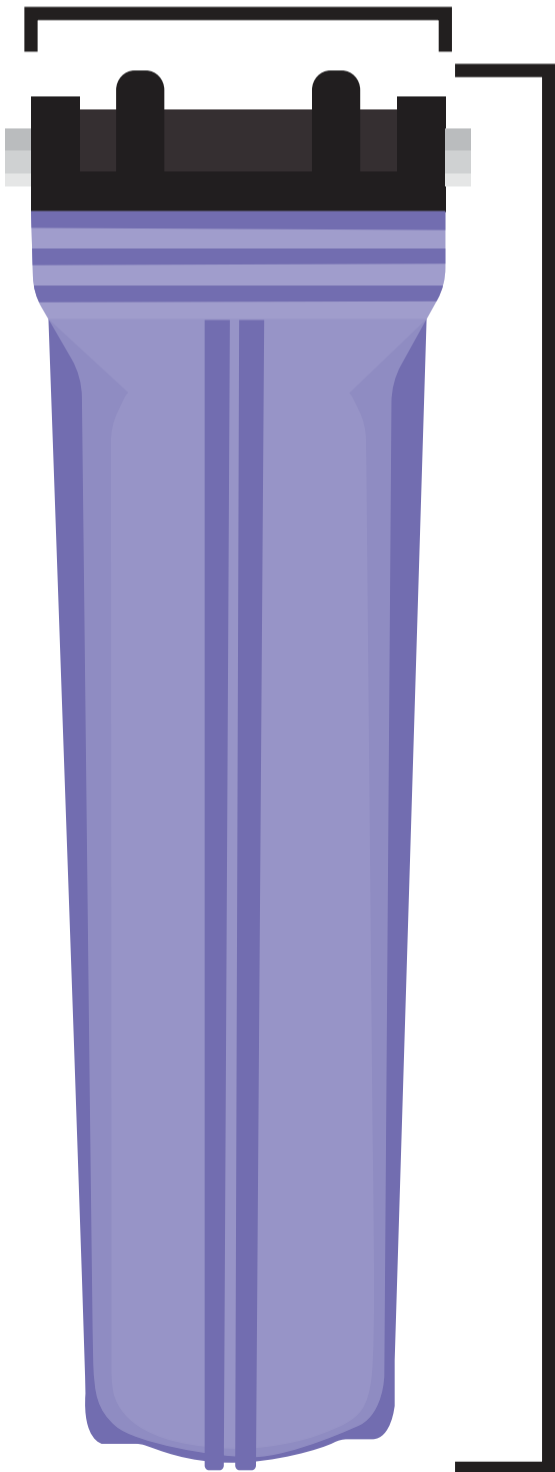

22.75"


**Disposable
end caps**

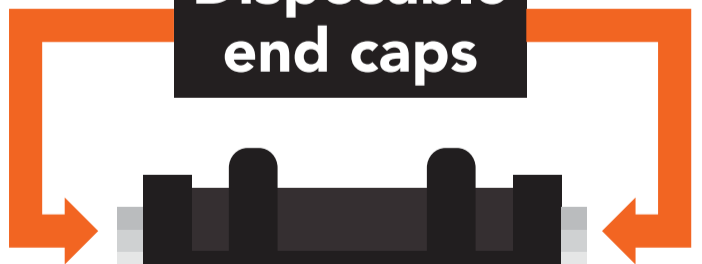


Instructions

Co2 Scrubber

1 Remove disposable endcaps

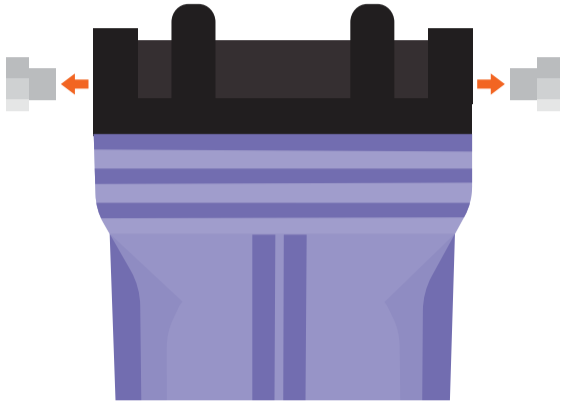


2 Connect to Co2 scrubber to your gas system

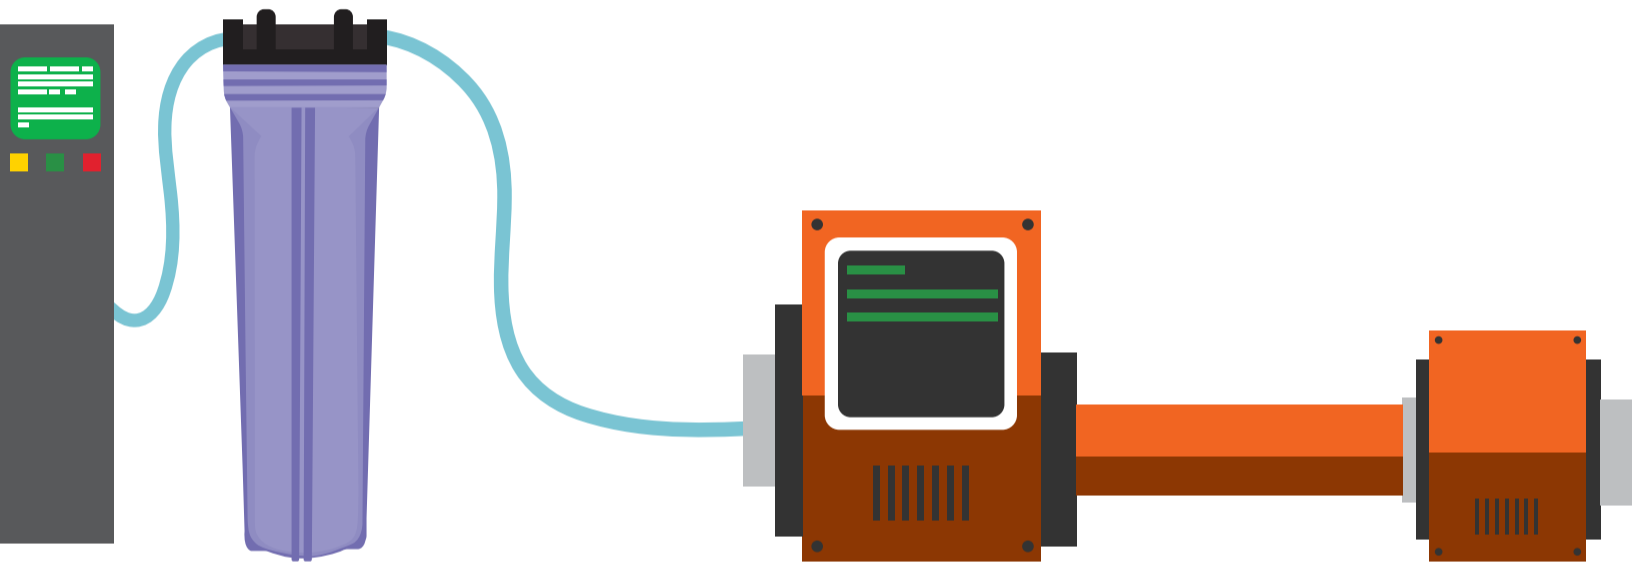

Color changing

Fresh

Exhausted

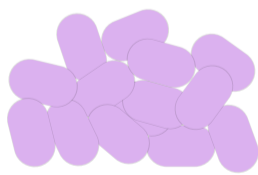

Regenerating soda lime is not possible.
(we tried)

Safety

- This is professional equipment.
- Atlas Scientific does not sell consumer products.
- This product is a component of your machine.
- Inhaled Soda lime dust can cause chemical burns.
- You are responsible for the safe handling and disposal of spent soda lime.