
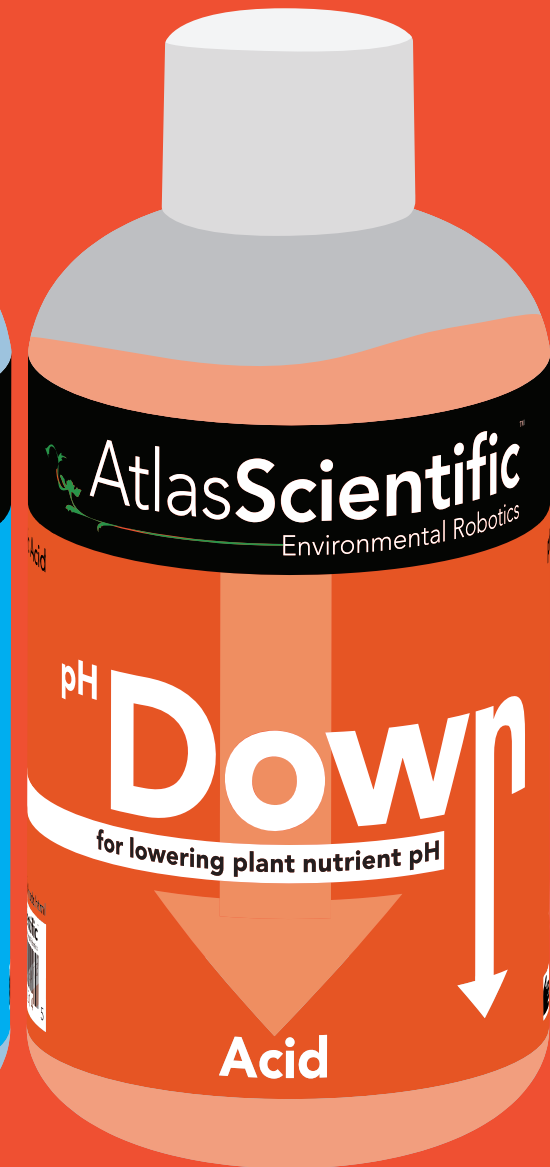


pH Up & Down

Hydroponic solutions

Great for Aquaponics
and Hydroponics

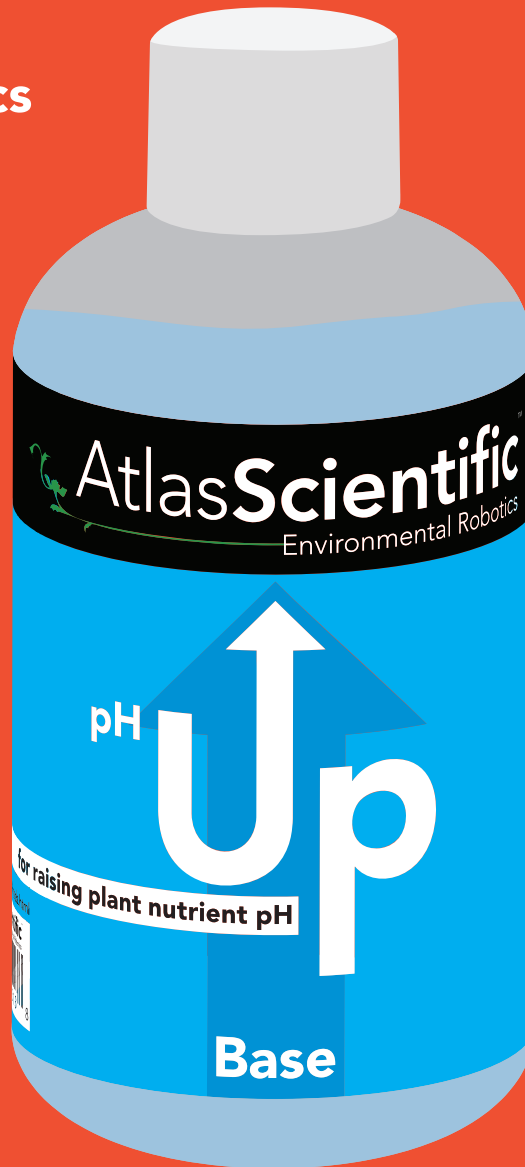

Attention

Do not dilute

This hydroponic solution does not need to be diluted.





Raising or lowering the pH

The Atlas Scientific pH Up and Down is simple to use and straight to the point.

Use this product sparingly.

Before you begin adding pH up and down, test your pH to confirm that you need to raise or lower the pH level.

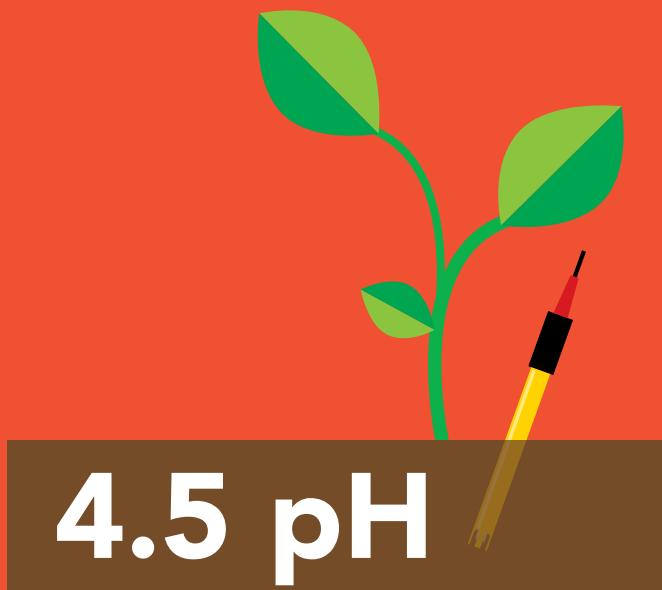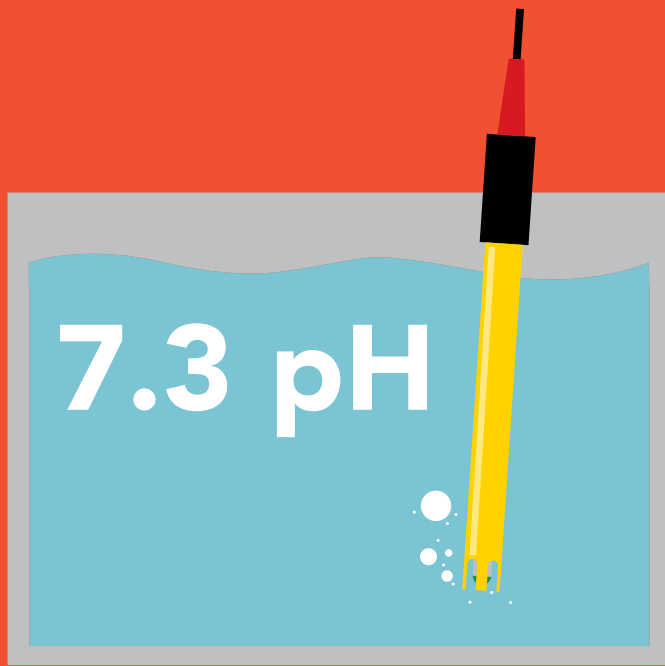

A little can go along way, so you'll want to add either pH up or down in small doses. Atlas Scientific recommends that you add 15mL (1 *tbsp*) for each gallon, or 3mL per liter.

Take a pH reading before adding another dose.



pH down is not recommended for fish tanks

Atlas Scientific's pH down contains phosphates and is not recommended for use in fish tanks. Although phosphates will not harm your fish; phosphates can cause algae blooms. In extreme cases, high phosphate levels can turn aquarium water into "pea soup."

